



Aluminium blinds Standart, 25 mm

1. Screw the brackets. Brackets must be installed in one line, horizontally.

1.1. Installation on the window frame.

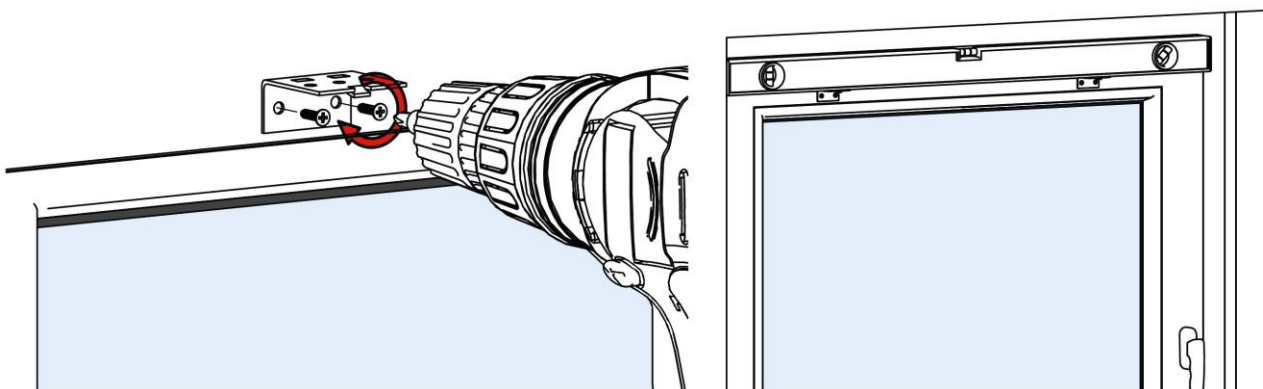


1.2. Installation in a niche.

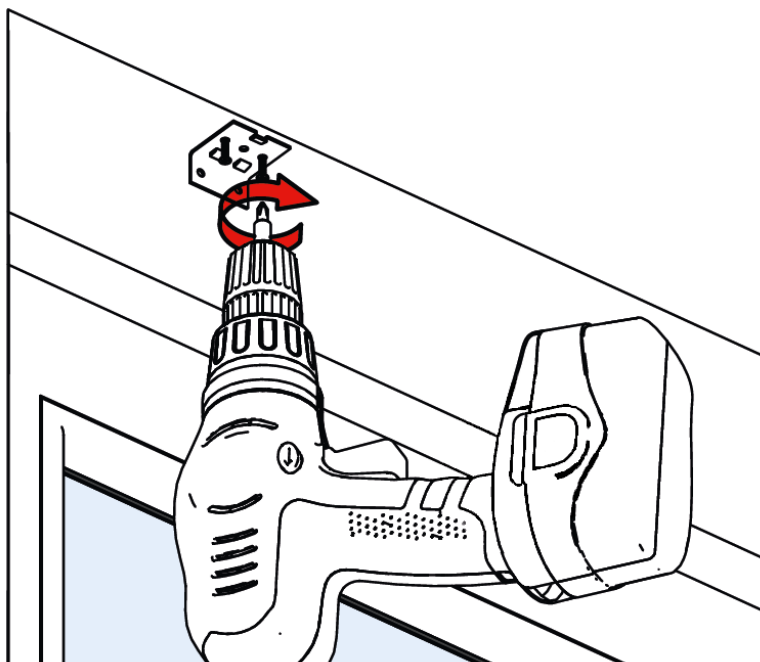


Aluminium blinds Standart, 25mm

1.3. Installation on a niche.

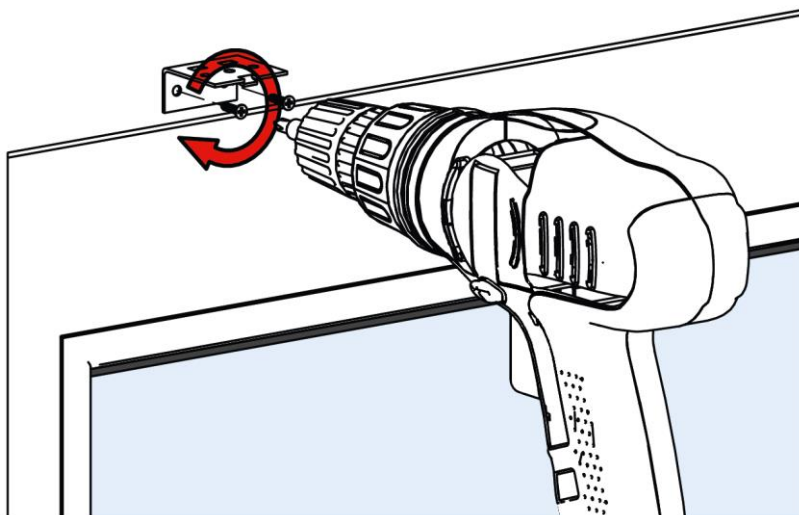


2. Insert the blind into the brackets.

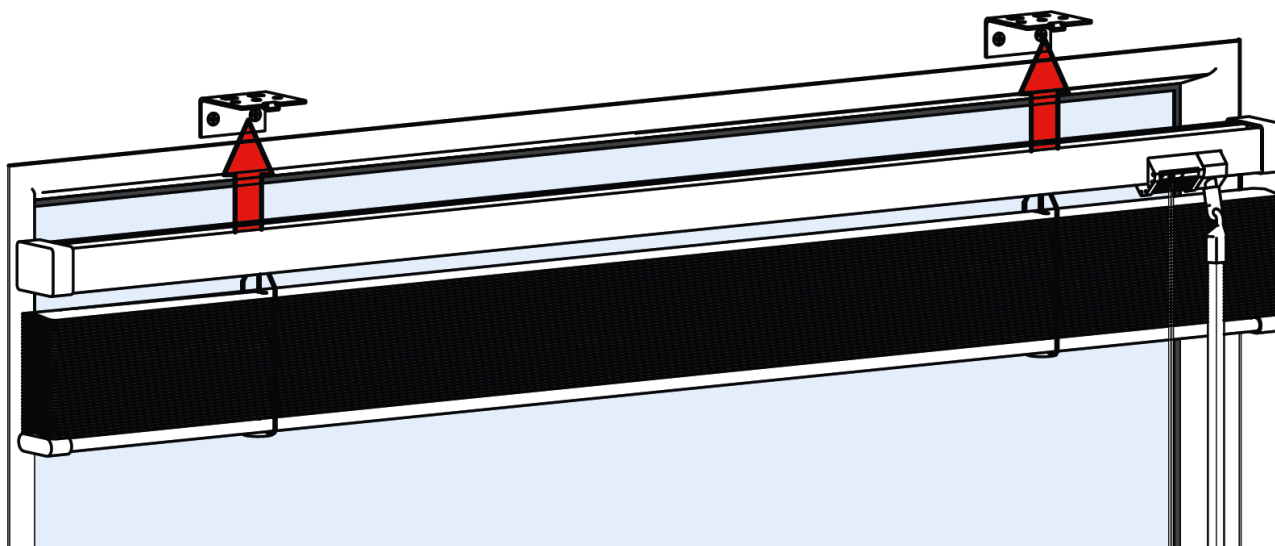


Aluminium blinds Standart, 25 mm

3a. Cable tensioning (if blind with cables). Screw the cable tension bracket in such position that the cable is taut when the lower brackets are installed. Make sure the tension bracket is screwed in at the correct height and cut off the unnecessary end of the cable.

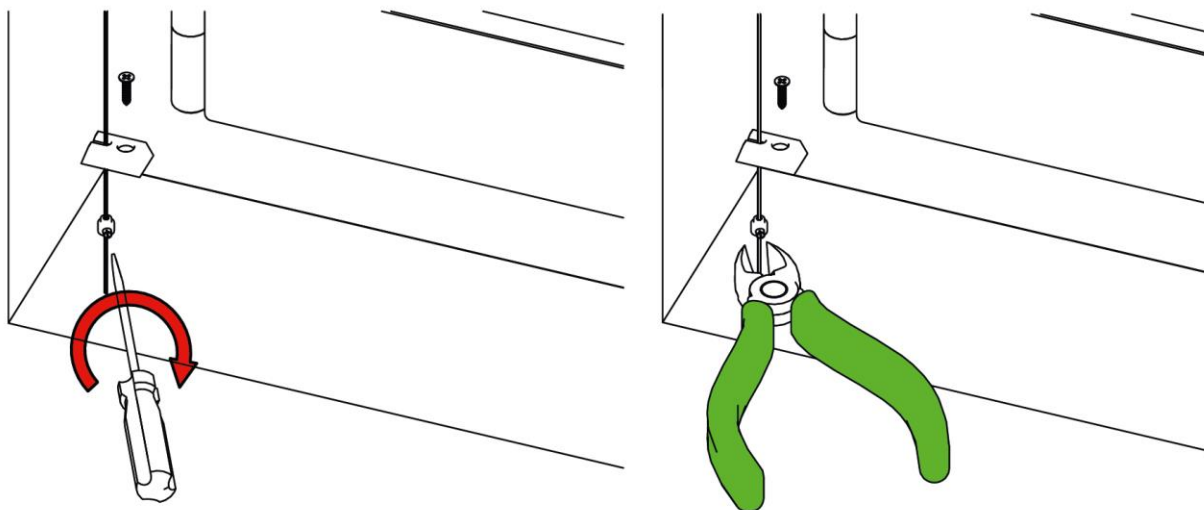


4a. Screw the lower cable brackets (if blind with cables).

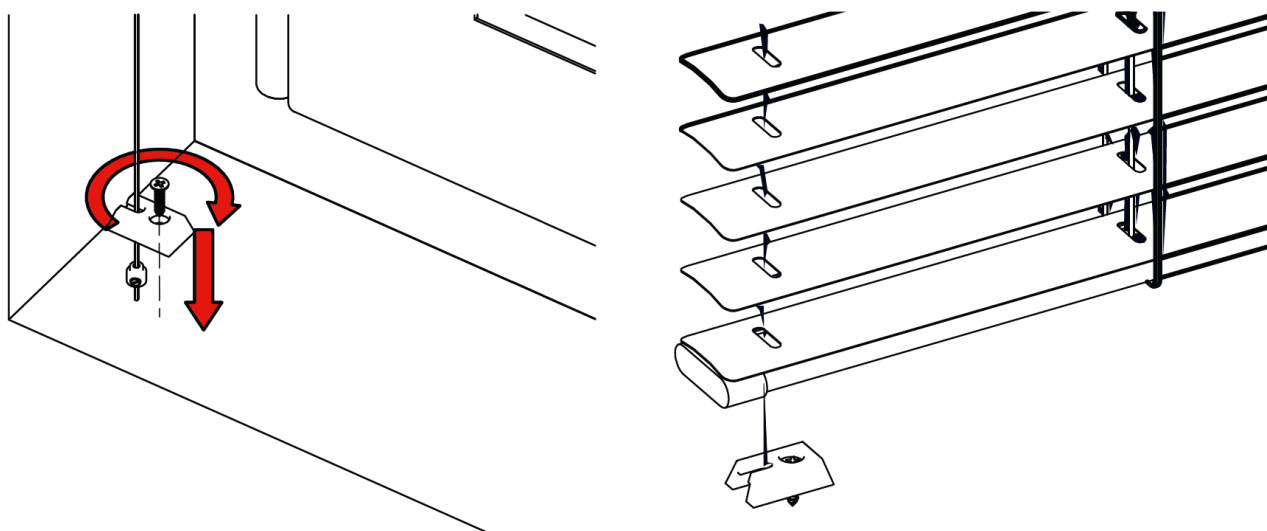

Aluminium blinds Standart, 25mm

3b. Installation of the bottom profile fixation. Lower the blind and mark the location of the bracket. Screw the bracket (for blinds with a bottom profile bracket).

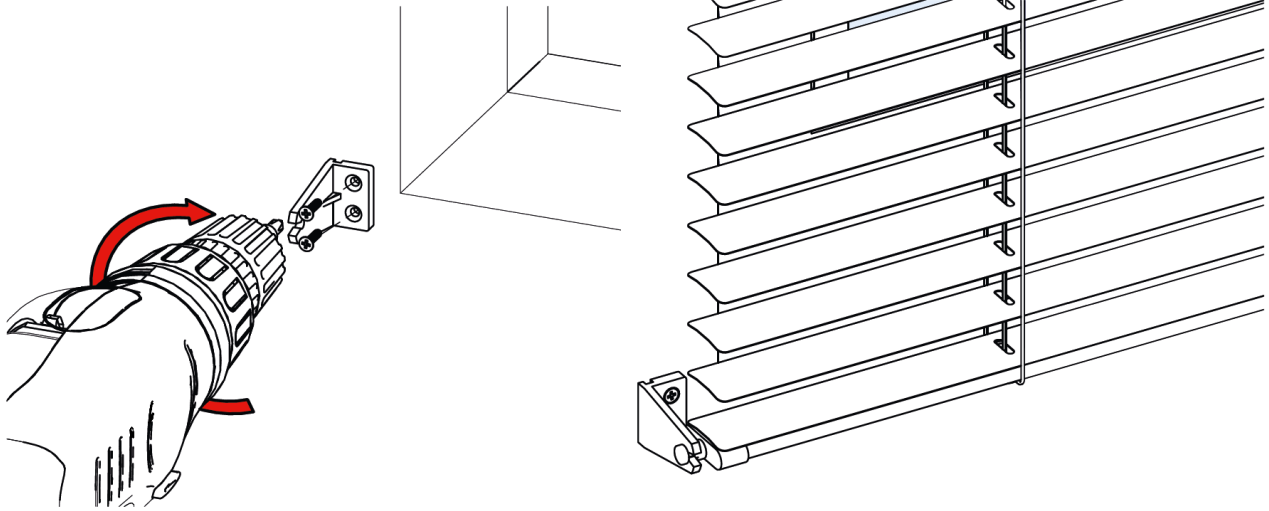

4. Check the control of the blind.

