


Aluminium blinds Standart, 50 mm

1. Step

Installation on a niche

If the blind will be installed on a niche, ensure that dimension C is the same on both sides. $C = (A - B) / 2$

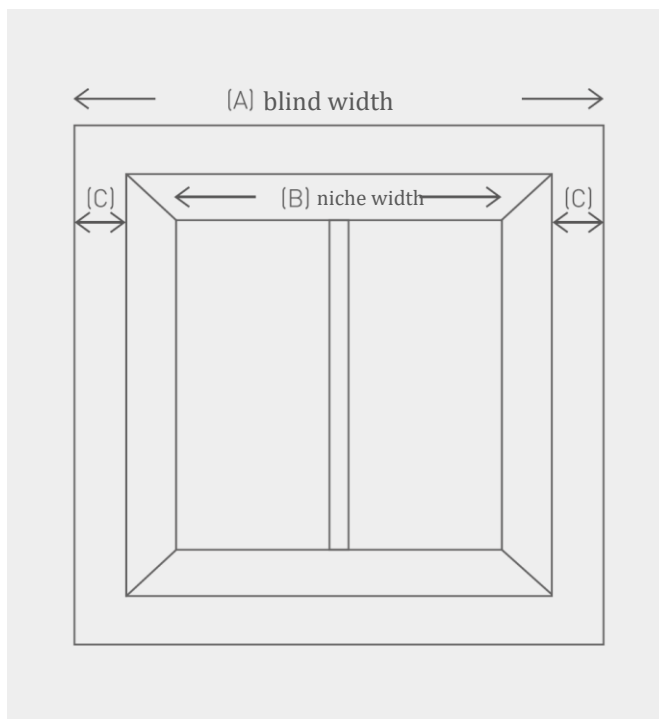

2. Step

The minimum installation height from the floor cannot be less than 1500mm.

Installation in a ceiling


Measure and mark the distance between the wall and the bracket. The bracket must be at a sufficient distance from the wall so that the window handle or other objects do not rest on the installed blind. The brackets are installed 6 mm wider on each side than the width of the blind. Add the brackets and mark the hole locations. Screw the brackets using suitable screws depending on the mounting base.

Installation on a wall

The brackets are installed 6 mm wider on each side than the width of the blind. Add the brackets and mark the hole locations. Screw the brackets using suitable screws depending on the mounting base.

Installation on the sides of the niche

Add the brackets and mark the hole locations. Screw the brackets using suitable screws depending on the mounting base.

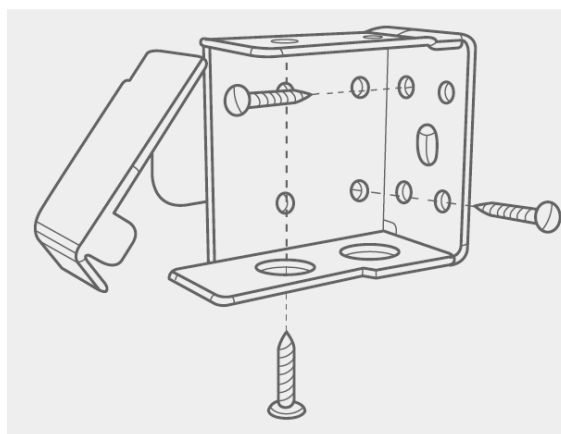


Aluminium blinds Standart, 50 mm


3. Step

Central brackets

Larger width blinds require center brackets to be installed. The top of the center bracket should be in line with the top of the side brackets. The wider part of the bracket should be at the top. The brackets are spaced evenly, adjusting the bracket location so that it is not at the product ladder.

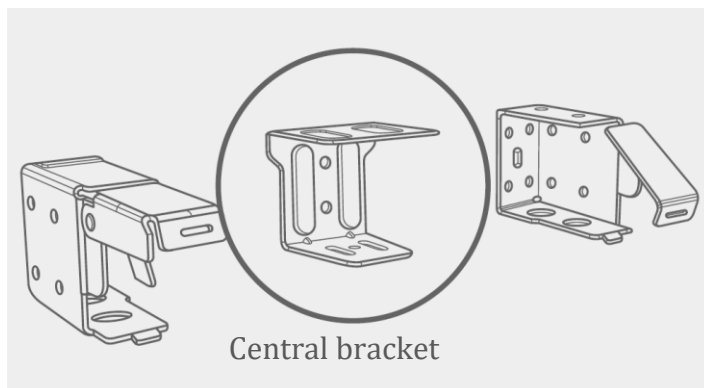

Open the side brackets, install the blind, close the brackets. Make sure the brackets are properly closed.

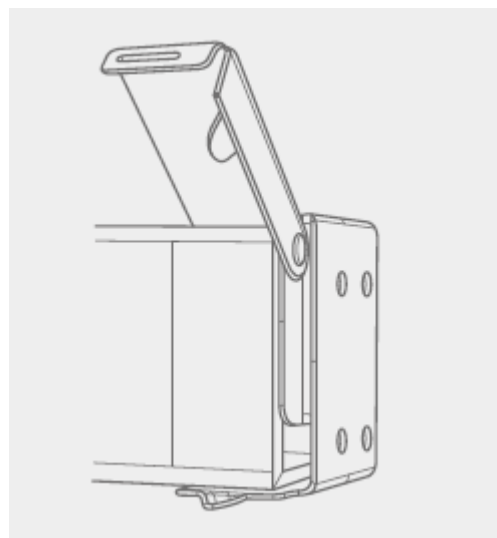


Number of ladders	Number of side brackets	Number of center brackets
2	2	0
3	2	1
4	2	2
5	2	3
6	2	4

Aluminium blinds Standart, 50 mm


Swivel bracket (optional)

The swivel bracket can be installed on the ceiling or on the wall. Place the brackets along the product in such a way that the components of the product located in the top profile do not interfere with their fixation. Add the brackets and mark the hole locations. If necessary, drill holes and screw the brackets using suitable screws, depending on the mounting base. Open the bracket leg, insert the product profile as shown and close the leg.

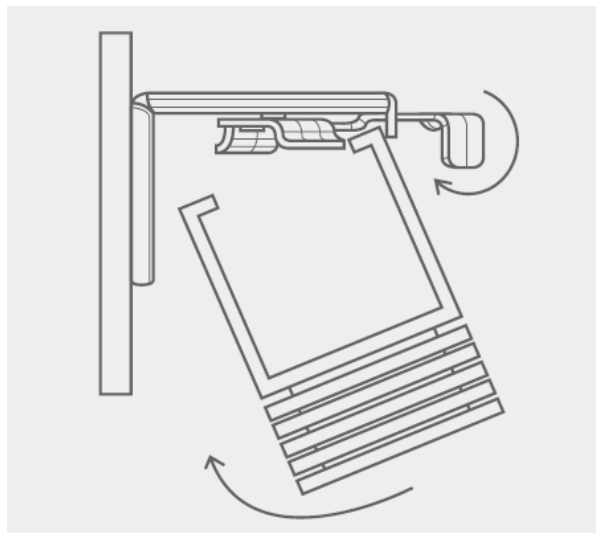

Bottom profile brackets (optional)


Brackets can be installed on a wall or to the sides of the niche. If necessary, drill holes and screw the brackets using suitable screws, depending on the mounting base. Insert the bracket into the hole in the bottom profile.

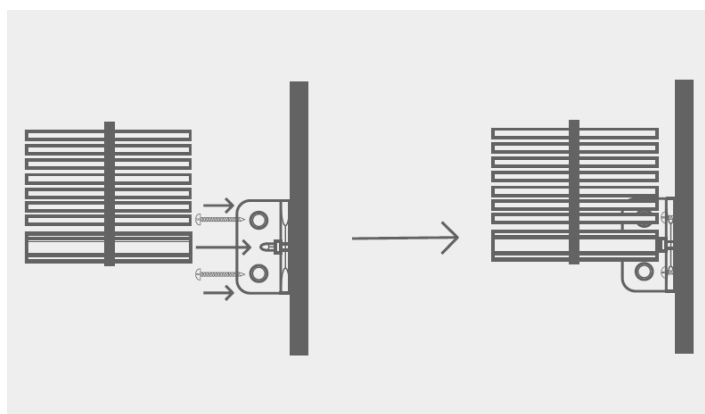

4. Step

Top profile valance (optional)

Remove the plastic protectors from the valance attachment located on the top profile. Add the valance to the top profile and hold it firmly for about 5 seconds.

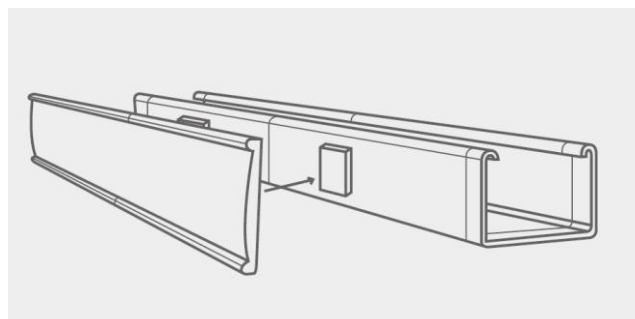

Aluminium blinds Standart, 50 mm

5. Step

Safe child

The package includes two sets of cord retainers. One set must be installed on the control side, the other on the lift side.


Cord retainers must be installed at a distance of at least 1500mm from the floor.

The cord must always be wrapped around the cord retainer when the product is not in use.


The table shows the recommended distance between the parts of the retainer depending on the height of the product.

Blind height	The distance between the retainer holes
Up to 1000 mm	100 mm
1001 – 2000 mm	150 mm
2001 – 3000 mm	300 mm

Add the cord retainer at the desired location and mark the hole locations.

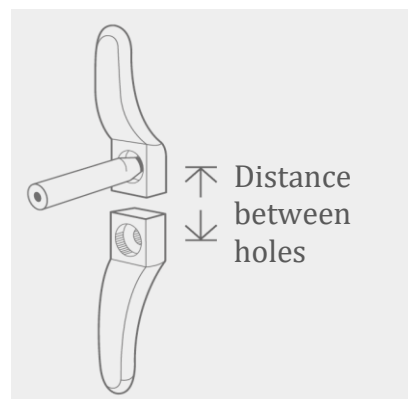

If necessary, drill holes and screw the brackets using suitable screws, depending on the mounting base.

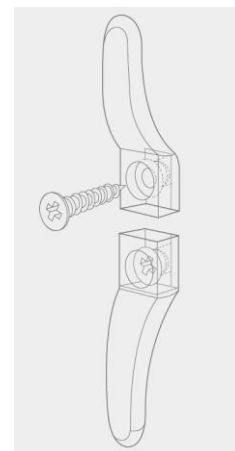

Aluminium blinds Standart, 50 mm

Wrap the cords as shown in the picture.

